
Compatibility list of GoodWe inverters and IoT products

Version 05
January 24, 2024



This document lists the compatibility between all GoodWe inverters and IoT products consisting of

1.Communication Modules 2.Data loggers and communication boxes 3.Smart Meters

Communication Module

Communication module integrates the function of local configuration and data transmitting to cloud center, so that customers can monitor inverter's working status locally or remotely.

Model	Status	ARM Platform	Communication Modules													Firmware Version Requirement (No remark means no version requirement)
			WiFi BOX	WiFi KIT	WiFi Kit-20	4G KIT-EC	4G KIT-AU	4G KIT-AF	BLUETOOTH KIT	LAN BOX	LAN KIT	WiFi+LAN KIT	WiFi/LAN Kit-20	WiFi/LAN Kit-20 (Cyber Security Version)	Ezlink3000	
			5PIN	USB	USB	USB	USB	USB	USB	5PIN	USB	USB	USB	USB	USB	
			Phase Out	Phase Out	Phase Out	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	
ESA	Phase Out	105	√													
ES	Phase Out	105		√								√*1				*1: ARM 19 or above; DSP 12 or above
BP/EM/SBP	Phase Out	105	√							√*1						*1: ARM 13 or above
ET ET PLUS+5~10K BT 5~10K EH EH PLUS+ BH	Mass Production	205		√		√*2	√*3		√*4			√*5		√*6		*2: ARM 20 or above (Only T-mobile/simpoint/1nce for Net herlors, and monthly traffic must be 250Mb or above) *3: ARM 20 or above (Only Telstra/Optus, and monthly traffic must be 250Mb or above) *4: ARM 12 or above *5: ARM 25 or above *6: ARM 30 or above
EHB	Phase Out	205		√		√*2	√*3		√*4			√*5		√*6		
AES/ABP	Mass Production	205		√				√	√*1			√*2				*1: ARM 12 or above *2: ARM 25 or above
ES G2	Mass Production	745		√	√*1							√*2	√*3	√*4	√*5(Parallel)	*1: ARM 07 or above (module ARM 04 or above) *2: ARM 02 or above *3: ARM 08 or above (module ARM 04 or above) *4: ARM 08 or above (module ARM 01 or above) *5: ARM 07 or above, DSP 02 or above (Ezlink ARM 02 or above)
SBP G2	Mass Production	745		√	√*1							√*2	√*3	√*4		*1: ARM 07 or above (module ARM 04 or above) *2: ARM 02 or above *3: ARM 08 or above (module ARM 04 or above) *4: ARM 08 or above (module ARM 01 or above)
ET 15~30K	Mass Production	745		√	√*1							√*2	√*3	√*4	√*5(Parallel)	*1: ARM 07 or above (module ARM 04 or above) *2: ARM 02 or above *3: ARM 08 or above (module ARM 04 or above) *4: ARM 08 or above (module ARM 01 or above) *5: ARM 08 or above, DSP 07 or above (Ezlink ARM 04 or above)
ET G2	Mass Production	745											√*1	√*2	√*3(Parallel)	*1: Module ARM 04 or above *2: Module ARM 01 or above *2: ARM 08 or above, DSP 01 or above (Ezlink ARM 04 or above)

Model	Status	ARM Platform	Communication Modules													Firmware Version Requirement (No remark means no version requirement)
			WiFi BOX	WiFi KIT	WiFi Kit-20	4G KIT-EC	4G KIT-AU	4G KIT-AF	BLUETOOTH KIT	LAN BOX	LAN KIT	WiFi+LAN KIT	WiFi/LAN Kit-20	WiFi/LAN Kit-20 (Cyber Security Version)	Ezlink3000	
			5PIN	USB	USB	USB	USB	USB	USB	5PIN	USB	USB	USB	USB	USB	
			Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	
ES-US20 SBP-US20	Mass Production	745														
ES uniq	Mass Production	745											√*1		√*1(Parallel)	*1: ARM 08 or above
ET 40~50K	Mass Production	745											√*1	√*2	√*3(Parallel)	*1: ARM 09 or above (module ARM 03 or above) *2: ARM 09 or above (moudle ARM 02 or above) *3: ARM 10 or above, DSP 02 or above (module ARM 05 or above)
XS XS PLUS+	Mass Production	105		√*1		√*3			√*2		√*3	√*3				*1: ARM 04 or above *2: ARM 14 or above *3: ARM 15 or above
	Mass Production	305*1		√		√			√		√	√				*1: ARM 50 or above
XS G3	Mass Production	425		√	√*3	√*2						√	√*3	√*4		*2: ARM 01 or above *3: Module ARM 04 or above *4: Module ARM 01 or above
DNS	Mass Production	105		√*1		√*3			√*2		√*3	√*3				*1: ARM 04 or above *2: ARM 14 or above *3: ARM 15 or above
	Mass Production	305*1		√		√			√		√	√				*1: ARM 50 or above
DNS G3	Mass Production	425		√	√*1	√*3	√*2		√			√*4	√*1	√*5		*1: ARM 03 or above (module ARM 04 or above) *2: 4G KIT ARM 06 or above *3: ARM 06 or above *4: ARM 03 or above *5: ARM 03 or above (module ARM 01 or above)
MS	Mass Production	305		√*1		√*1			√*1		√*1	√*1				*1: ARM 50 or above
MS G3	Mass Production	425		√	√*1	√*3	√*2		√				√*1	√*5		*1: ARM 03 or above (module ARM 04 or above) *2: 4G KIT ARM 06 or above *3: ARM 06 or above *5: ARM 03 or above (module ARM 01 or above)
MS-US	Mass Production	745		√*2	√*1			√*2	√*2			√*2	√*1	√*1	√*1	*1: ARM 04 or above (WiFi/LAN kit-20 ARM 04 or above, , WiFi/LAN kit-20 cybber sercirty ARM 01 or above, Ezlink ARM 01 or above) *2: ARM 05 or above

Model	Status	ARM Platform	Communication Modules													Firmware Version Requirement (No remark means no version requirement)
			WiFi BOX	WiFi KIT	WiFi Kit-20	4G KIT-EC	4G KIT-AU	4G KIT-AF	BLUETOOTH KIT	LAN BOX	LAN KIT	WiFi+LAN KIT	WiFi/LAN Kit-20	WiFi/LAN Kit-20 (Cyber Security Version)	Ezlink3000	
			5PIN Mass Production	USB Mass Production	USB Mass Production	USB Mass Production	USB Mass Production	USB Mass Production	USB Mass Production	5PIN Mass Production	USB Mass Production	USB Mass Production	USB Mass Production	USB Mass Production	USB Mass Production	
SDT G2 SDT G2 PLUS+	Mass Production	205		√		√*1			√*2		√	√				*1: ARM 14 or above *2: ARM 09 or above
	Mass Production	405*1		√		√			√		√	√				*1: ARM 50 or above
SDT G3	Mass Production	425		√	√								√*1	√*2		*1: ARM 14 or above *2: ARM 09 or above
MT MT G2	Phase Out	105	√	√*1					√*3		√*4	√*4				*1: ARM 04 or above *3: ARM 14 or above *4: ARM 15 or above
	Phase Out	305*1	√	√					√		√	√				*1: ARM 50 or above
UT	Mass Production								√							
HT 1100V	Mass Production	753		√					√						√*2	*2: ARM 16 or above (Ezlink needs 04 or above)
HT 1500V	Mass Production	753		√					√							
EO	Mass Production												√	√		
SMT	Mass Production	205		√					√*1			√*2				*1: ARM 09 or above *2: ARM 12 or above
SMT-US	Mass Production	745		√				√*1	√*1			√*1	√*1			*2: ARM 05 or above
LV SMT-US	Mass Production	745						√	√				√			
SMT 75/80K	Mass Production	745											√			
GT 100-125K	Mass Production	745							√				√			
GT 110/125K KR	Mass Production	745							√				√			DSP 05 or above
GT 75V LV	Mass Production	745							√				√			DSP 05 or above

Data Logger and communication box

Data Logger supports to connect multiple inverters by RS485 mainly for C&I system, and PLC(HPLC) for utility system, achieving functions of data monitoring and system control. Moreover, adding smart meter can realize the function of power limitation.

Model	Status	ARM Platform	Data loggers											ARM Version Requirement (No remark means no version requirement)
			EzLogger Pro	EzLogger3000C	SEC1000	SEC1000S	SCB3000	SCU3000A	SCU3000A-S	SCU3000	SCU3000-S	EzLogger3000U-A	EzLogger3000U	
			Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	
ET ET PLUS+	Mass Production	205				√*1								*1: ARM 09 or above
XS XS PLUS+	Mass Production	105	√											
	Mass Production	305*1	√											*1: ARM 50 or above
XS G3	Mass Production	425	√*2											*2: DSP 07 or above
DNS	Mass Production	105	√											
	Mass Production	305*1	√											*1: ARM 50 or above
DNS G3	Mass Production	425	√*2											*2: DSP 07 or above
MS	Mass Production	305	√*1											*1: ARM 50 or above
SDT G2 SDT G2 PLUS+	Mass Production	205	√*2		√*2									*1: ARM 50 or above *2: ARM 13 or above
	Mass Production	405*1	√		√									
SDT G3	Mass Production	425	√*1	√*2	√*1									*1: ARM 03 or above *2: ARM 04 or above, DSP 02 or above
MT MT G2	Phase Out	105	√*1		√*1									*1: ARM 12 or above
	Phase Out	305*1	√		√									*1: ARM 50 or above
UT	Mass Production	745		√*2				√*1 HPLC+RS485	√*1 HPLC+RS485			√*1 HPLC+RS485		*1: ARM 02 or above, HPLC 01 or above *2: ARM 02 or above SCU3000A/EzLogger3000U-A 01 or above

Smart Meter

Smart Meter can detect power import and export status to achieve functions of power limitation, battery charging and discharging management, etc.

Model	Status	ARM Platform	Smart Meters												ARM Version Requirement (No remark means no version requirement)	Power limitation (only for systems with one inverter)	Load monitoring
			GM1000	GM1000D	GMK110	GMK110D	GM3000	GM3000C	GM330	GMK120	GMK140	GMK330	HK1000	HK3000			
			1CT	2CT	1CT	2CT	3CT	/	/	North-America 2CT	North-America 4CT	3CT	2CT	3CT			
			Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production			
ESA ES	Phase Out	105	√*1				√*1								*1: ARM 13 or above	√	√
BP	Phase Out	105	√*1												*1: ARM 13 or above	√	√
EM	Phase Out	105	√*1				√*1								*1: ARM 13 or above	√	√
SBP	Phase Out	105	√*1	√*1			√*1								*1: ARM 13 or above	√	√
ET PLUS+5~10K BT5~10K	Mass Production	205					√									√	√
EH PLUS+ BH	Mass Production	205	√	√			√									√	√
AES	Mass Production	205		√*1						√*1					*1: ARM 17 or above	√	√
ABP	Mass Production	205		√*1						√*1	√*1				*1: ARM 17 or above	√	√
EHB	Phase Out	205	√*1												*1: ARM 17 or above	√	√
ES G2	Mass Production	745	√		√*1		√								*1: ARM 01 or above	√	√
SBP G2	Mass Production	745	√	√	√*1	√*1									*1: ARM 01 or above	√	√
ET 15~30K	Mass Production	745					√		√*1						*1: ARM 07 or above	√	√
ET G2	Mass Production	745					√		√							√	√
ES uniq	Mass Production	745			√*1				√*1						*1: ARM 08 or above	√	√
ES-US	Mass Production	745								√						√	√
SBP-US	Mass Production	745								√	√					√	√
ET 40~50K	Mass Production	745					√*1		√*2						*1: ARM 09 or above *2: ARM 09 or above (Parallel needs ARM 10 or above)	√	√
ETC/BTC	Mass Production	753						√	√							√	√
XS	Mass Production	105	√										√		*1: ARM 50 or above	√ (HK1000)	√ (HK1000)
XS PLUS+	Mass Production	305*1	√										√			√ (HK1000)	√ (HK1000)

Model	Status	ARM Platform	Smart Meters												ARM Version Requirement (No remark means no version requirement)	Power limitation (only for systems with one inverter)	Load monitoring
			GM1000	GM1000D	GMK110	GMK110D	GM3000	GM3000C	GM330	GMK120	GMK140	GMK330	HK1000	HK3000			
			1CT	2CT	1CT	2CT	3CT	/	/	North-America 2CT	North-America 4CT	3CT	2CT	3CT			
			Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production			
XS G3	Mass Production	425	√		√		√*1					√	√		*1: ARM 01 or above	√	√
DNS	Mass Production	105	√													x	x
	Mass Production	305*1	√										√		*1: ARM 50 or above	√ (HK1000)	√ (HK1000)
DNS G3	Mass Production	425	√*1		√*1		√*2					√	√		*1: ARM 03 or above *2: ARM 06 or above	ARM 05 or above	ARM 05 or above
MS	Mass Production	305	√										√			√ (HK1000)	√ (HK1000)
MS G3	Mass Production	425	√*1		√*1		√*2					√	√		*1: ARM 03 or above *2: ARM 06 or above	ARM 03 or above	ARM 03 or above
MS US	Mass Production	745								√*1					*1: ARM 05 or above	ARM 05 or above	ARM 05 or above
SDT G2 SDT G2 PLUS+	Mass Production	205					√							√	*1: ARM 50 or above	√(HK3000)	√(HK3000)
	Mass Production	405*1					√							√			
SDT G3	Mass Production	425					√		√			√		√*1	*1: Power limitation function doesn't need network configuration for HK3000	√	√(Need AC power supply)
MT MT G2	Phase Out	105					√*2	√*2							*1: ARM 50 or above *2: ARM 14 or above	x	x
	Phase Out	305*1					√	√									

Model	Status	ARM Platform	Smart Meters												ARM Version Requirement (No remark means no version requirement)	Power limitation (only for systems with one inverter)	Load monitoring
			GM1000	GM1000D	GMK110	GMK110D	GM3000	GM3000C	GM330	GMK120	GMK140	GMK330	HK1000	HK3000			
			1CT	2CT	1CT	2CT	3CT	/	/	North-America 2CT	North-America 4CT	3CT	2CT	3CT			
			Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production	Mass Production			
UT	Mass Production	745															Use Acrel Meter (DSP 04 or above, CPLD 01 or above)
HT 1100V	Mass Production	753													Special model is supported		
ETC BTC	Mass Production	753						√	√							√	√
SMT	Mass Production	205							√*1					√	*1: ARM 19 or above	√	ARM 19 or above
SMT-US	Mass Production	745							√*1						*1: ARM 05 or above	√	√
LV SMT-US	Mass Production	745							√*1						*1: ARM 05 or above	√	√
SMT 75/80K	Mass Production	745							√							ARM 02 or above	ARM 02 or above
GT 100-125K	Mass Production	745							√							ARM 03 or above	ARM 03 or above
GT 110/125K KR	Mass Production	745							√							ARM 05 or above	ARM 05 or above
GT 75V LV	Mass Production	745							√							ARM 05 or above	ARM 05 or above

Note: If using HK1000 for load monitoring, please do not connect the RS485 cable between the inverter and meter.

Notice

The information in this document is subject to change without notice, all information in this document do not constitute any kind of warranty. Please check with GoodWe Solar Academy 'academy@goodwe.com' for the latest version.